

# HEADLIGHT RELAY

## ON-VEHICLE INSPECTION

1. REMOVE HEADLIGHT RELAY
- (a)

Remove the headlight relay from the engine room No. 2 relay block.
- (b)

Measure the resistance of the relay.

**Standard resistance**

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

If result is not as specified, replace the relay.

